



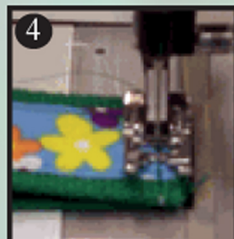

## RIBBON KEY FOB INSTRUCTIONS

### Supplies Needed:

10" of ribbon  
10" of cotton webbing  
10" of heat and bond  
1 set of fob hardware

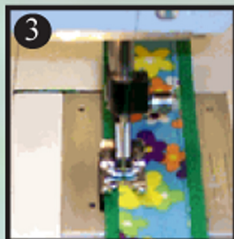

### INSTRUCTIONS FOR MAKING RIBBON KEY FOBS

Step 1: Iron heat & bond to ribbon paper side up.

Step 2: Peel paper off ribbon and iron on to webbing.

Step 3: Stitch both sides of the ribbon on your machine.

Step 4: Fold in half and stitch both ends together.

Step 5: Crimp hardware on with pliers.

Step 6: Add the ring and you are done!

Note: Stitching through the heat and bond will gum up your needle, so wipe off your needle with a q-tip dipped in alcohol.



Helpful Hint: We wrapped duct tape around the tips of our pliers to keep the jaws from scratching the hardware.

Fobs look great with or without embroidery.

[www.TheSewphisticatedStitcher.com](http://www.TheSewphisticatedStitcher.com) \* Toll Free 1-866-210-0072